

Installation Guide

LUSAS Version 15.0 : Issue 1

LUSAS
Forge House, 66 High Street, Kingston upon Thames,
Surrey, KT1 1HN, United Kingdom

Tel: +44 (0)20 8541 1999
Fax +44 (0)20 8549 9399
Email: info@lusas.com
<http://www.lusas.com>

Distributors Worldwide

Copyright ©1982-2014 LUSAS
All Rights Reserved.

Table of Contents

LUSAS V15.0 Installation Guide	1
Software Supply and Licensing	1
Installing LUSAS	3
The LUSAS Installation Procedure	3
The LUSAS Configuration Utility.....	4
Changing the License Type.....	5
Using Multiple Standalone Licenses	5
Obtaining Software Updates	5
File Permissions	6
Installing LUSAS on 64-bit machines	6
Using 32 bit Modeller with 64 bit Solver.....	7
Installing a Network (Floating) License	9
Procedure	9
1. Choosing a license server computer	9
2. Installing (or upgrading) the Sentinel software	10
3. Installing LUSAS software on all client computers	11
License renewal	11
Troubleshooting.....	12
Contacting LUSAS Technical Support.....	13
Installing a Standalone USB Key License	15
Procedure	15
1. Before you install the LUSAS software.....	15
2. Install the software.....	15
3. Insert the USB Key.....	15
4. Enter the license code file	16
Changing the product type.....	16
The LUSAS Configuration Utility	17
Licensing.....	18
Add Licence Wizard	21
Adding New Network Licence Details.....	22
Adding Standalone Licence Details.....	24
Using Existing Network Licence Details	25
Temporary Files	27
Disk Clean Up.....	28
Memory Usage Information	29
Modify Memory Usage	30
Graphics	31
Modeller Settings.....	33
Language.....	35
Potential Installation and Running Errors	37
Network (Floating) license installation error messages.....	37
If you do not have a local DNS running on your network.....	38
Problems with Hardware Graphics Drivers.....	38
Computer hangs on reboot when USB Key inserted into USB Hub	39

LUSAS V15.0

Installation Guide

Software Supply and Licensing

LUSAS software is available in 32 bit and 64 bit versions. By default LUSAS software is made available from a download area on the LUSAS website. By request, it can also be supplied on CD/DVD. Access to a particular software product is controlled by codes supplied by the LUSAS licensing department. These codes give access to the software product(s) that your organisation is licensed to use. The following licensing methods are available:

- ❑ **Network (or floating) licensing** controlled by Sentinel license server software. Licences are locked to a USB Key that can be moved between license servers. The LUSAS license server needs to have access to a USB port. Please refer to the correct section in this Guide for your use.
- ❑ **Standalone USB Key licensing** controlled by a device called a USB Key that is inserted into a USB port on the computer.

It is mandatory on all operating systems that a user with FULL administration rights carries out the installation as set out below. Attempting to install LUSAS without administrative rights will result in errors. Contact your IT department if you are unsure.



Notes.

- This guide is written assuming installation is made to the installation directory C:\LUSAS150..
- Steps described in this guide are numbered and lettered to assist with any support calls that you may make if problems are encountered.
- LUSAS uses Sentinel license manager software which is developed in the United States of America. As a result the U.S English spelling of 'license' and 'licensing' is generally used throughout this guide to match that used by the Sentinel license server software. LUSAS Modeller dialogs, general on-line help text, and Configuration Utility pages (that are created directly from the

on-line help pages) may use the U.K. English spelling of 'licence' and 'licencing'.

Installing LUSAS

The LUSAS Installation Procedure

The procedure described below relates to installing LUSAS software on 32 bit machines. A 64 bit version of LUSAS software can be installed in a similar way. See *Installing LUSAS on 64 bit machines* for details.

1. Please **DO NOT** insert any license protection devices (such as a USB Key) until instructed to do so. These instructions will inform you of the right time to do so.
2. Exit any applications you are running, then depending upon your chosen installation method either:
 - Double-click the downloaded self-extracting LUSAS executable and unzip the required files, or,
 - Insert the installation CD/DVD into the CD/DVD drive on the computer. If the LUSAS installation does not start automatically, open Windows Explorer and run (double-click) the program **<CDdrive>:\Setup.exe** on the installation CD/DVD and follow the on screen instructions. On the LUSAS Installer dialog choose **LUSAS Finite Element System** and click **Install**.
3. After a period of time whilst the LUSAS installation file is extracted, the InstallShield Wizard for LUSAS Version 15.0 will appear.
4. If a lower 'dash' version of Version 15.0 is found you will be asked if you wish to update in which case any files in the Install directory created or altered by you will remain after the update. If a higher dash version is found you will be prompted to remove that version before and if you wish to proceed with the new installation
5. Enter your Customer Information (Name and Organisation, for instance)

6. Specify a folder in which to install the LUSAS software. By default, the installation will not overwrite any previous major versions of the software (e.g. Version 14.6 or 14.7) currently loaded on the computer.
7. When ready to install the program, click **Install**.
8. On the LUSAS Configuration Settings dialog, choose the way that graphics are to be drawn to the screen.
9. On the next dialog displayed choose whether to inherit license details from a previous version, or to enter them manually. The former will only be available if the installation of a previous version has been detected.
10. If you chose to manually enter your license code(s), enter them on the Licensing dialog. For instructions on entering the license details, please refer to the appropriate section in this guide according to your license type:
 - **Installing a Network (Floating) License**
 - **Installing a Standalone USB Key License**

Restart your system for the change made to LUSAS Version 15.0 to take effect. Please note that this step is mandatory, and unpredictable effects can occur if this step is omitted.

The LUSAS Configuration Utility

Once LUSAS is successfully installed, subsequent changes can be made to a LUSAS installation by using the LUSAS Configuration Utility. Running this differs according to the operating system in use:

- If running Windows XP/2000/Vista, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 7, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 8, right-click on the main Start screen, choose **All Apps** and browse for the **Configuration Utility**
- If running Windows 8.1, on the main Start screen, click on the Apps down arrow icon and browse for the **Configuration Utility**
- For a 64 bit installation browse for the **Configuration Utility x64** entry

The Configuration Utility consists of a number of tabbed pages that are used to control the following:

- ☐ Licensing information for the computer
- ☐ Temporary file locations
- ☐ Memory usage settings for LUSAS Modeller and LUSAS Solver
- ☐ Whether hardware or software drivers are to be used to draw graphics
- ☐ Modeller settings (resetting of defaults and specifying locations of results files)
- ☐ Language settings to be used for the user interface.

Full details of its use are detailed in The LUSAS Configuration Utility section.

Changing the License Type

If your organisation changes its license type (i.e. USB Key or Network (Floating) license) at some point after installation, there is no need to reinstall LUSAS. Run the LUSAS Configuration Utility, and install the new license as described in the relevant section in this guide.

Using Multiple Standalone Licenses

LUSAS allows you to install several different standalone licenses, and will automatically use the one for which a physical USB key is present. Using the LUSAS Configuration Utility, add any/all license codes which you may wish to use on a given computer into the Licensing page of the dialog. Before running LUSAS, ensure that only one of the physical USB Keys is inserted in the machine.

Obtaining Software Updates

A downloadable copy of latest CD/DVD version of LUSAS is always made available from a protected download page inside the User Area of the LUSAS website. Pages in the LUSAS User Area are for viewing by LUSAS clients only. We will supply the named LUSAS 'key' contact(s) within your company or organisation with the Username and Password required.

You can check for any software updates by viewing the password protected What's New page in the LUSAS User Area:

http://www.lusas.com/protected/What_Is_New.html

The What's New page contains links to the protected software download page:

<http://www.lusas.com/protected/download/index.html>

This page contains details of what to do to enable you to download a software update.

File Permissions

Please note that the main LUSAS installation folder will, by default, be installed with the same user access permissions as the immediate parent folder (usually C:\), with one exception: The LUSAS program requires writable access to certain files in the programs/scripts sub-folder. If this is not available, the program will fail with an error message. The LUSAS installation will automatically add writable access to this folder to all users who are in the group named “Users”. Users who are not in this named group may need to be given permission to write to this folder. Additionally the LUSAS documentation advises users to create files in the projects sub-folder, but this is optional, and so the installation program does not force the permissions for the projects folder.

Installing LUSAS on 64-bit machines

The 64-bit version of Modeller and Solver is provided as an independent installation file. 64-bit versions of LUSAS software should be installed in the same root folder as that specified for the 32 bit versions (the default installation location is \lusas150\) so that they share the same licence and help files. Once installed, the programs will appear in the folder **\Programs (x64)**. Menu items LUSAS Modeller x64 and LUSAS Solver x64 will appear under Start Menu\All Programs\LUSAS 15.0 for Windows.

The 64-bit configuration may be adjusted by clicking using the Start Menu\All Programs\LUSAS15.0 for Windows\Tools\Configuration Utility x64 menu item.

Notes:

- The 64-bit version of LUSAS Modeller has no geometry engine and, as a result, only allows for assignments to be made to the mesh (known within LUSAS as ‘mesh only modelling’) and results processing.
- The 64-bit version of LUSAS Solver is functionally the same as the 32-bit version.
- Models created in the 32 bit version of LUSAS Modeller can be solved in either the 32 bit or 64 bit version of LUSAS Solver.
- Results files from the 64-bit LUSAS Solver can be processed in either the 32-bit or the 64-bit version of LUSAS Modeller.
- In order to use the 64-bit versions a 64-bit operating system must be installed.
- For general information relating to installing and configuring LUSAS software see the relevant sections of this guide.

Using 32 bit Modeller with 64 bit Solver

If 32 bit and 64 bit versions are both installed the default behaviour, when initiating a solve from within 32 bit Modeller, is to run the 32 bit Solver as specified in this line of the C:\LUSAS150\Programs\Lusas_S.bat file:

```
"C:\LUSAS150\Programs\Lusas_s.exe" %1 %2 %3 %4
```

If it is required to always run the 64 bit Solver when using the 32 bit Modeller, the C:\LUSAS150\Programs\Lusas_S.bat file should be edited to include the path to the file name of the 64 bit Solver executable as follows:

```
"C:\LUSAS150\Programs (x64)\Lusas_s.exe" %1 %2 %3 %4
```


Installing a Network (Floating) License

Procedure

If you have purchased a network license, the following installation procedure applies.

1. Choosing a license server computer

The first step is to choose a license server computer. It doesn't matter whether LUSAS is (or will be) also installed on this computer. If you already have a Sentinel license server on your network to license other software, you may prefer to use it rather than create another one. Any computer on the network can be used as the license server and it should not be confused with a fileserver or a network authentication server. Note that a Sentinel server of version 8.1.1 or above is required for running LUSAS version 14.3 and above.

To discover whether or not you have a suitable Sentinel server running, install the LUSAS software on any client computer. Once installed, start the LUSAS Configuration Utility. Running this differs according to the operating system in use:

- If running Windows XP/2000/Vista, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 7, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 8, right-click on the main Start screen, choose **All Apps** and browse for the **Configuration Utility**
- If running Windows 8.1, on the main Start screen, click on the Apps down arrow icon and browse for the **Configuration Utility**

On the Licensing page press the **Add...** button and from the resulting dialog select **New licence from license code file**. On pressing **Next** there will be a pause whilst LUSAS scans your network for servers.

If suitable servers are found

Any license server computers that are subsequently shown are suitable for use with LUSAS. Choose one, insert the USB Key into the chosen license server and then enter the location of the license code file that you have been given. Note that the license server computer might or might not be the same machine as the client computer on which LUSAS is installed.

The option the **Make this licence available to LUSAS on this (local) machine** adds the license to the server and makes the licence available to the PC from which LUSAS is run. When the Apply or OK button is pressed the license is added to the fea.key license file. This file is used by the LUSAS Configuration Utility to allow users to access available licenses. This file is not to be manually edited.

If no suitable servers are found

If no suitable servers were found, it will be necessary to install the Sentinel license server. Additionally, you may choose to designate a machine as a new LUSAS license server, even if an existing machine is suitable.

If out of date servers are found

LUSAS will report the name of any server that has been installed with a lower version than that required. These server computers are suitable for use with LUSAS, but only after their Sentinel software has been upgraded. To do this, please follow the instructions for installing the Sentinel software on the license server computer.

2. Installing (or upgrading) the Sentinel software

This step is not necessary if you chose to use an existing suitable server.

The installation is carried out following the sub-steps listed below. Note all of these instructions must undertaken by a user logged in with administrator access rights.

1. Insert the LUSAS installation CD/DVD in the CD/DVD drive of the license server computer or initiate the installation using the downloaded LUSAS file.
2. If the LUSAS installation does not start automatically, run (double-click) the program <CDdrive>:\Setup.exe and follow the on screen instructions.
3. On the LUSAS Installer dialog choose **Sentinel RMS License Manager** and press **Install** and follow the instructions.
4. Once the main part of the installation is complete, a dialog will be shown inviting you to enter your license code file location. Please insert your USB Key into the server computer now. You should already have the license code file, **usb<xxx_sn>.txt** - enter its location, press the OK button, and your license installation is complete.

5. After installation reboot the license server computer

3. Installing LUSAS software on all client computers

It will be necessary to install the **LUSAS Finite Element System** (but not the Sentinel license server) on each client computer, as only the licensing information is shared.

Once the license has been added to the server, all client computers need to be told about the license server. On each client computer in turn, start the LUSAS Configuration Utility. Running this differs according to the operating system in use:

- If running Windows XP/2000/Vista, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 7, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 8, right-click on the main Start screen, choose **All Apps** and browse for the **Configuration Utility**
- If running Windows 8.1, on the main Start screen, click on the Apps down arrow icon and browse for the **Configuration Utility**

On the Licensing page press the **Add...** button and from the resulting dialog select **Existing Network license**. On pressing **Next** there will be a pause whilst LUSAS scans your network for servers. Select the chosen server from the list. If licenses for multiple LUSAS products are available on that server, it will also be necessary to choose one of these.

The option the **Make this licence available to LUSAS on this (local) machine** adds the license to the server and makes the licence available to the PC from which LUSAS is run. When the Apply or OK button is pressed the license is added to the fea.key license file. This file is used by the LUSAS Configuration Utility to allow users to access available licenses. This file is not to be manually edited.

Once licences have been added they will appear both on the Licensing page of the LUSAS Configuration Utility and be made available for selection on the Modeller Licence Selection dialog that can be set to always appear during startup of LUSAS.

License renewal

Please note that the process of renewing, upgrading or modifying a license first involves removing the existing license. Therefore you may receive an error message if one or more users have active LUSAS sessions when you attempt to renew the license. If you experience any problems renewing a license, it may be necessary to temporarily add the old license again, in order to keep users working whilst the problem is resolved.

Troubleshooting

The new licenses should become available to all client computers immediately. If this does not occur, it may be necessary to (re)start the Sentinel software on the server, or even to reboot the server computer.

If you have installed the Sentinel software using the LUSAS installation, this can be checked. This differs according to the operating system in use:

- If running Windows XP/2000/Vista, click **Start> All Programs> LUSAS Server Utils> Install Network License** on the licence server, and press **Create report...**
- If running Windows 7, click **Start> All Programs> LUSAS Server Utils> Install Network License** on the licence server, and press **Create report...**
- If running Windows 8, right-click on the main Start screen, choose **All Apps>** and browse for **Install Network License** on the licence server, and press **Create report...**
- If running Windows 8.1, on the main Start screen, click on the Apps down arrow icon and browse for **Install Network License** on the licence server, and press **Create report...**

In all cases, in the resulting text file, your server computer should be shown in the section **Output from lswhere**, and your license details should be shown in the section **Output from lsmon**. If this is not the case, you should try manually starting the license server.

If you chose to use an existing server, please refer to the Sentinel documentation appropriate to the version of Sentinel that was installed.

There is a known problem with the Sentinel license server when the server machine is rebooted with the USB key absent. In this circumstance the Sentinel server process is started, but does not respond to network broadcasts, and therefore cannot be seen by a search from other (client) machines. Subsequently inserting the USB Key appears to have no effect. To fix this problem, insert the USB Key and then either reboot the server again, or stop and re-start the license server process as described below.

(Re)starting the license server for Windows NT/2000/XP/Vista

This is done by going to the location of the installed license software, normally **C:\Program Files\Common Files\SafeNet Sentinel\Sentinel RMS License Manager\WinNT**, and running the program “**loadls.exe**”. This program will allow you to stop and (re)start the license server process for the server machine. To stop any server processes already running, press **Remove**. To start the license server process press **Add**.

(Re)starting the license server for Windows 7 or 8

This is done by going to the location of the installed license software, normally **C:\Program Files\Common Files\SafeNet Sentinel\Sentinel RMS License Manager\WinNT**, and running the program “**loadls.exe**”. This program will allow you to stop and (re)start the license server process for the server machine. To stop any server processes already running, press **Remove**. To start the license server process press **Add**.

For further information on this particular subject please read the SentinelLM System Administrator's Guide html help which can be found here:

- If running Windows XP/2000/Vista, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Sentinel System Administrators Guide**
- If running Windows 7, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Sentinel System Administrators Guide**
- If running Windows 8, right-click on the main Start screen, choose **All Apps** and browse for the **Sentinel System Administrators Guide**
- If running Windows 8.1, on the main Start screen, click on the Apps down arrow icon and browse for the **Sentinel System Administrators Guide**

Contacting LUSAS Technical Support

If, after rebooting the license server, the LUSAS configuration tool on the client machine still cannot see the license server, please generate the following two reports, one from the server computer, and one from the client. These two reports can then be sent to LUSAS Technical Support for further assistance.

To generate the first report:

- If running Windows XP/2000/Vista, from the server computer, run **Start> All Programs> LUSAS Server Utils> Install Network License** and press **Create report...**
- If running Windows 7, from the server computer, run **Start> All Programs> LUSAS Server Utils> Install Network License** and press **Create report...**
- If running Windows 8, from the server computer, right-click on the main Start screen, choose **All Apps** and browse for **Install Network License** and press **Create report...**
- If running Windows 8.1, on the main Start screen, click on the Apps down arrow icon and browse for **Install Network License** and press **Create report...**

Note, if you opted to use an existing server, the above link will not be present, because the LUSAS utilities have not been installed. In this instance, you will instead need to insert your LUSAS CD/DVD (or the CD/DVD image that you have created using the LUSAS download file) into the server computer and, also at the server computer, double click on the file <CD drive>:\LUSAS150\installLicense\setup.exe. This will launch the LUSAS utility, and you can then create a report as above.

To generate the second report:

From any client computer, run the LUSAS configuration utility and press **Create report....**

Installing a Standalone USB Key License

Procedure

If you have purchased a USB Key license, the following installation procedure applies:

1. Before you install the LUSAS software

Ensure that the USB key is **NOT** inserted into the USB port of the computer until instructed to do. Remove the USB key if it has already been inserted.

2. Install the software

Install the LUSAS software as described on page 3.

3. Insert the USB Key

Once the license details page of the LUSAS installation is displayed, you may insert the supplied USB Key in any free USB port. Your operating system should recognise the device and (if necessary) will install the correct drivers. Note that it may do this each time you insert the USB key into a different port.

4. Enter the license code file

You should have the license code file, **usb<xxx_sn>.txt** as an email attachment. Where **<xxx>** is the license number and **sn** is the USB Key serial number. If you do not have a license code file contact the LUSAS licensing department [\[licensing@lusas.com\]](mailto:licensing@lusas.com)

To install the license:

- Save the file you have been sent to any convenient folder
- In the license dialog that appears during the installation of LUSAS, or using the LUSAS Configuration Utility, on the Licensing tab press the **Add...** button.
- In the resulting dialog, choose **USB license from a license code file**, click **Next** and enter the location of the license code file and, if you wish, a name to identify the license, finally click **Finish** to add the license.
- Although the new license will be shown in the list, it will not be available for use until you press **Next** during installation, or **Apply** on the LUSAS Configuration Utility.

The license is added to the fea.key license file. This file is used by the LUSAS Configuration Utility to allow users to access available licenses. This file is not to be manually edited.

Changing the product type

For licences issued for, or after Version 14.3 only: If your organisation has purchased more than one LUSAS product type, each will be attached to a different USB Key. LUSAS recommends that you enter all of the license code files onto all computers on which LUSAS is installed. Once this has been done, to choose a different LUSAS product exit LUSAS, remove the USB Key, insert a different USB Key, and start LUSAS again. LUSAS will use the product which matches the inserted USB key license options.

The LUSAS Configuration Utility

The LUSAS Configuration Utility may be accessed after the software has been installed.

Running the utility differs according to the operating system is use:

- If running Windows XP/2000/Vista, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 7, click **Start> All Programs> LUSAS 15.0 for Windows> Tools> Configuration Utility**
- If running Windows 8, **right-click on the main Start screen**, choose **All Apps** and browse for the **Configuration Utility**
- If running Windows 8.1, **click on the Apps down arrow icon** and browse for the **Configuration Utility**


The LUSAS Configuration Utility consists of a number of tabbed pages that are used to control the following:

- ☐ **LUSAS licensing** information for your computer
- ☐ **Temporary files** Shows the Windows virtual memory (page) file location(s), the Windows temporary files location, and the LUSAS Modeller and LUSAS Solver temporary file locations.
- ☐ **Memory usage** Displays current settings for LUSAS Modeller and LUSAS Solver
- ☐ **Graphics drivers** Specify whether hardware or software drivers are to be used to draw your graphics to the screen
- ☐ **Modeller Settings** Specify model file locations for LUSAS results and intermediate files.
- ☐ **Language settings** to be used for the user interface.

Notes

- In general, changes made to settings and values using the LUSAS Configuration Utility will not take effect until LUSAS is next run.
- Only Licensing and Graphics pages from the LUSAS configuration utility are displayed during the LUSAS installation process.

Licensing

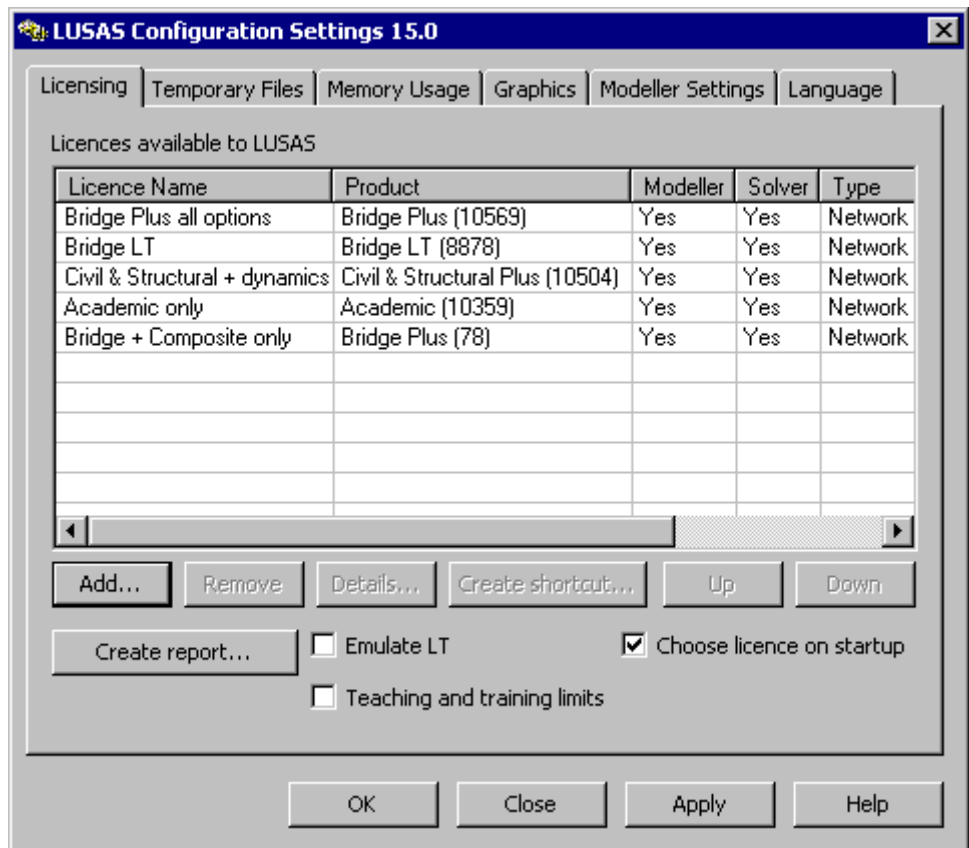

This page of the **LUSAS Configuration Utility** is similar to the main LUSAS licence selection dialog that can be chosen to be displayed on startup of LUSAS. This licensing page lists all software products that are available for selection, whether the license key includes access to the LUSAS Modeller or the LUSAS Solver application, basic details of the licence type, server name, and the number of days left until expiry. It allows for adding additional LUSAS licences, removing licences and for listing details of those already added.

Invalid licences (those that have either expired or already been completely taken by others prior to the display of the dialog) are greyed out. Licences expiring within 14 days are displayed in red.

The licence selection dialog is always displayed on start-up of LUSAS unless it has been disabled by unchecking the **Choose licence on startup option**, or unless only one licence has been made available to LUSAS.

In summary:

- ☐ Use the Licensing page of the Config Utility to add licences to the list of those available and to perform administrative tasks.
- ☐ Use the Modeller licence selection dialog to allow users to select a particular licence for use.

Licence order and usage

The order of the licence types listed on the Licensing tab of the LUSAS Configuration Utility follows the order of the keys present in the fea.key license file. If the display of the LUSAS licence selection dialog has been disabled the first licence in the list will be used in preference to all others (if valid and available) otherwise the next licence name in the list will be used, and so on. As licences are used the number of licences available for others to use is updated accordingly.

- Network and Standalone licences may be added using the Add License Wizard which can be accessed by clicking on the **Add...** button.
- Selected licences can be removed by using the **Remove** button.
- Use the **Up** and **Down** buttons to re-order licence types. Changes made to the order of licence types using this dialog will also be made automatically to the fea.key license file.

Licence details

- By selecting a licence and then selecting the **Details...** button additional information such as the licence version, Key ID and actual licence expiry date can be viewed.
- If the licence is greyed-out (and therefore disabled) the errors that occurred on validating the licence will be displayed.

Creating shortcuts

- ☐ The **Create shortcut...** button provides the means to tie a licence type to a shortcut used to run **Modeller** or **Solver** and with the choice to **Emulate LT** or use **Teaching and Training limits**. It enables LUSAS Modeller or LUSAS Solver to run using a specific licence each time (if that licence is available and valid).

Example of shortcut created

```
<LUSAS Installation folder>\Programs\lusas_m.exe  
LICNAM=[SENTINELLM,TECHNICAL01,6274(6270)]
```

Create Report

- ☐ Generates a text file with a name of your choosing. This file lists licence key and server information for sending to LUSAS Technical Support for assistance if problems are met in getting the licence server software to run correctly.

Emulating LT Behaviour

- ☐ When **Emulate LT** is selected it causes a reduced set of menu options for a 'Lite' version to be used instead of those displayed and used by a standard or plus version.


Teaching and training limits

- ☐ When **Teaching and training limits** is selected no licence is taken. LUSAS can be used as normal but with the restricted model size, node, element and loadcase limits of the Teaching and Training version.

Choose licence on startup

- ☐ When **Choose licence on startup** is selected it causes the LUSAS licence selection dialog to appear each time LUSAS is run. It does not appear if only one licence has been made available in the configuration utility.

Add Licence Wizard

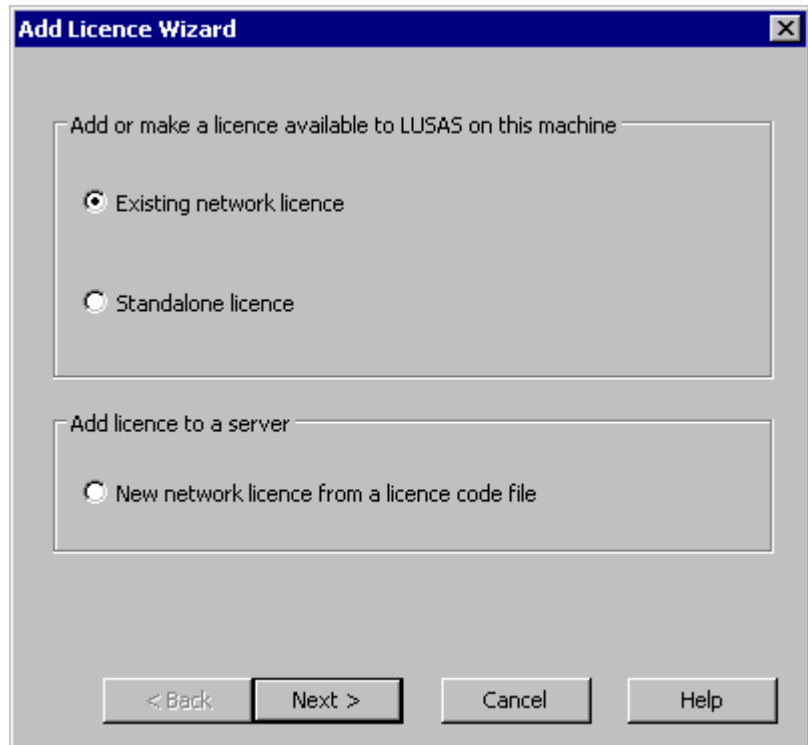

Selecting the **Add...** button on the Licencing page of the **LUSAS Configuration Utility** provides the means to add or make licences available to LUSAS on the machine on which you are working.


- ☐ Dialogs to add or make available existing network or standalone licences may be accessed.
- ☐ New network licences may also be added to any server on your network.

Notes

Choosing to add an existing network licence to a machine or to add a new licence to a server involves a search of available network licences. Depending upon the number of licences and machines on a network this may take some time to complete.

Adding New Network Licence Details

If you are installing a new network licence for the first time your network licence keys are supplied to you by LUSAS in a text file.

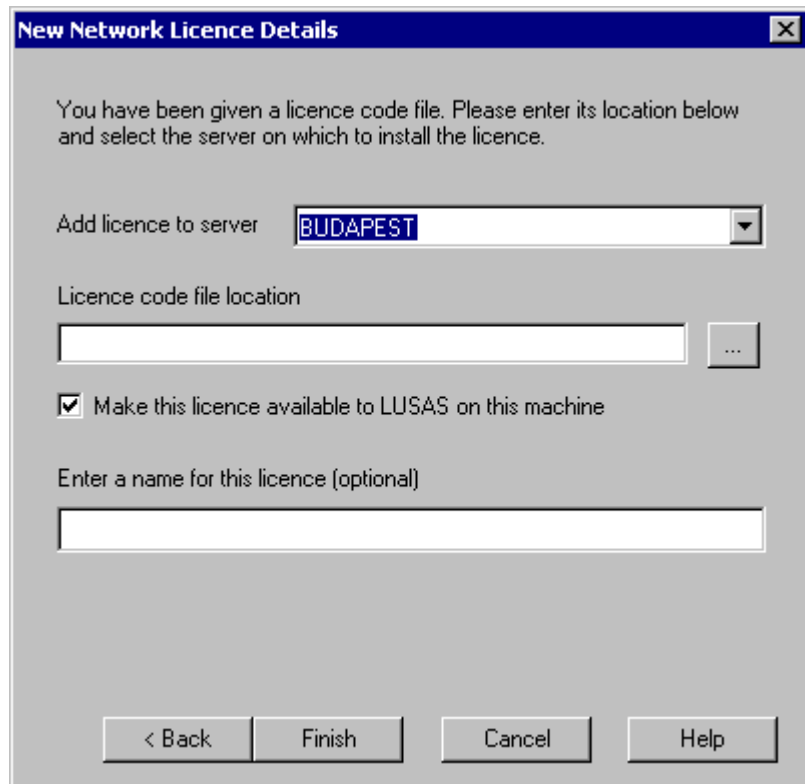

The dialog box titled "New Network Licence Details" contains the following elements:

- Instructional text: "You have been given a licence code file. Please enter its location below and select the server on which to install the licence."
- "Add licence to server" label followed by a dropdown menu showing "BUDAPEST".
- "Licence code file location" label followed by a text input field and a browse button (three dots).
- A checked checkbox labeled "Make this licence available to LUSAS on this machine".
- "Enter a name for this licence (optional)" label followed by a text input field.
- Four buttons at the bottom: "< Back", "Finish", "Cancel", and "Help".

- Select the server to which you wish to add a new network licence.
- Select the  button to browse to the location of the Licence Code text file supplied for your LUSAS software installation.
- The option to make this licence available to LUSAS on this (local) machine is enabled by default. If unchecked, the licence is only added to the server.
- Entering a licence name is optional.

Notes

- A server name or IP Address of a known server can be manually entered if not discovered when the dialog was first initialised.


- If you are getting communication errors relating to a server and you suspect a clash of port numbers you may wish to communicate with a particular server on a different port. In this case, the port number can be entered in the server combo, separating the server name from the port with a colon. You must also alter the port on which the server in question is listening. This is done by running Administrative tools on the server machine and differs according to the operating system in use:
 - If running Windows XP/2000/Vista, on the server machine click Start menu> Settings > Control Panel, and double click Administrative Tools
 - If running Windows 7, on the server machine click Start menu> Control Panel, and double click Administrative Tools
 - If running Windows 8, on the server machine right-click on the main Start screen, choose All Apps and browse for Administrative Tools
 - If running Windows 8.1, on the server machine on the main Start screen, click the Apps down arrow icon and browse for Administrative Tools

Once accessed:

1. Double click **Services**, locate **Sentinel RMS Development Kit License Manager** and double click it.
2. Click **Stop**
3. Enter **-PORT <your port number>** in the start parameters text box.
4. Click **Start**

Adding Standalone Licence Details

Standalone licence key codes are provided in a text file. This file is normally sent by email to a named LUSAS contact within your organisation.

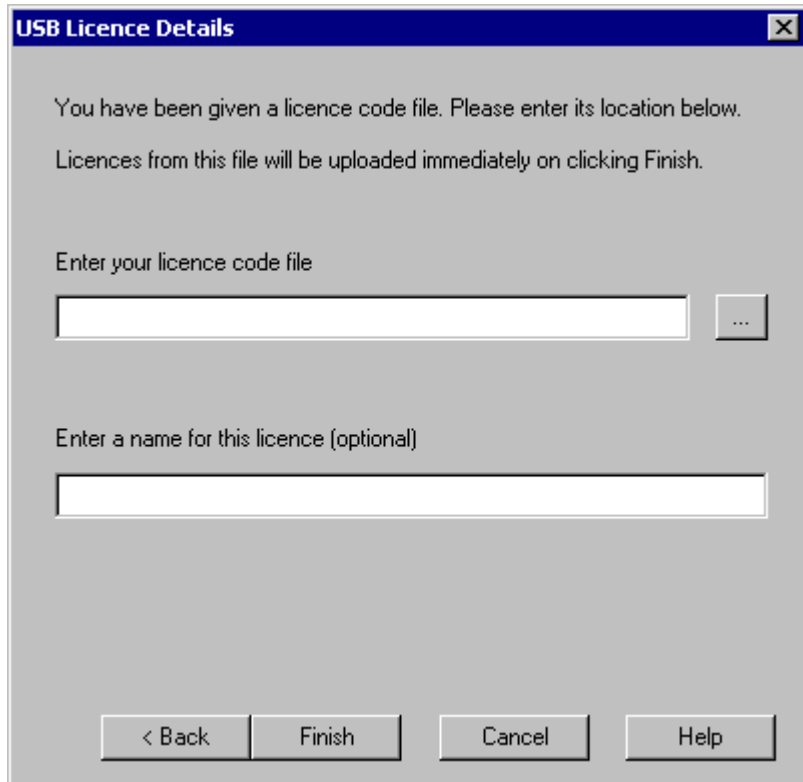

USB Licence Details

You have been given a licence code file. Please enter its location below.
Licences from this file will be uploaded immediately on clicking Finish.

Enter your licence code file


Enter a name for this licence (optional)

< Back Finish Cancel Help

- Select the  button to browse to the location of the Licence Code text file supplied for your LUSAS software installation.
- Entering a name for this licence is optional

Using Existing Network Licence Details

Your network may already have a number of servers that have LUSAS licences installed. If so, use the Existing Network Licence Details dialog if you wish to make one of these licences available to LUSAS on your machine.

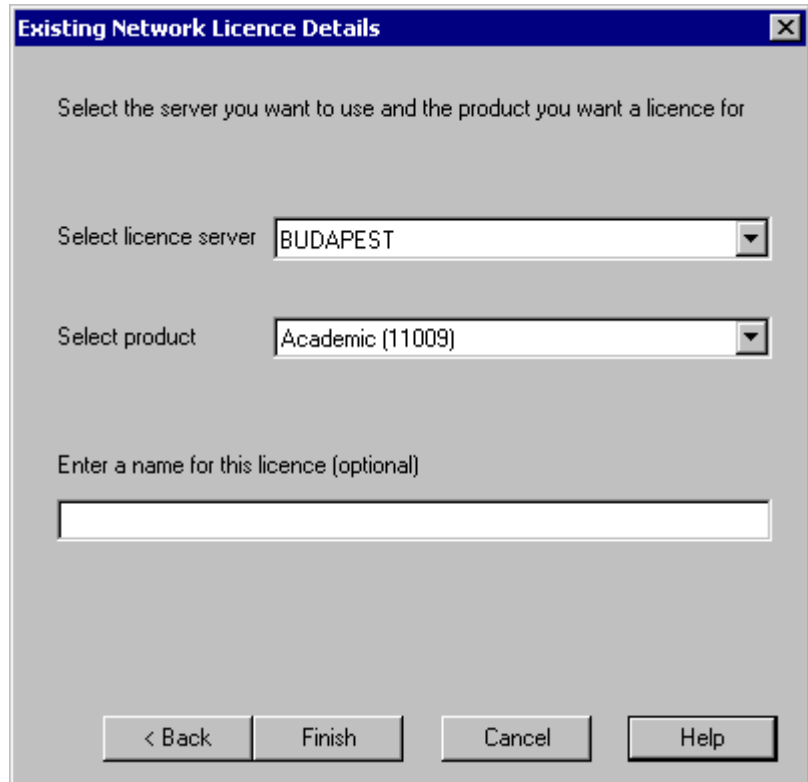

The dialog box titled "Existing Network Licence Details" has a blue header bar with a close button (X) in the top right corner. The main area is light gray and contains the following elements:

- Instruction text: "Select the server you want to use and the product you want a licence for"
- "Select licence server" label followed by a dropdown menu showing "BUDAPEST"
- "Select product" label followed by a dropdown menu showing "Academic (11009)"
- Text: "Enter a name for this licence (optional)" followed by an empty text input field
- Four buttons at the bottom: "< Back", "Finish", "Cancel", and "Help"

- Select the licence server that contains the list of available products that you wish to choose from.
- Select the product that you wish to make available for use on your machine.
- Entering a licence name is optional.

Notes


- A server name or IP Address of a known server can be manually entered if not discovered when the dialog was first initialised.

- If you are getting communication errors relating to a server and you suspect a clash of port numbers you may wish to communicate with a particular server on a different port. In this case, the port number can be entered in the server combo, separating the server name from the port with a colon. You must also alter the port on which the server in question is listening. This is done by running Administrative tools on the server machine and differs according to the operating system in use:
 - If running Windows XP/2000/Vista, on the server machine click Start menu> Settings > Control Panel, and double click Administrative Tools
 - If running Windows 7, on the server machine click Start menu> Control Panel, and double click Administrative Tools
 - If running Windows 8, on the server machine right-click on the main Start screen, choose All Apps and browse for Administrative Tools
 - If running Windows 8.1, on the server machine on the main Start screen, click on the Apps down arrow icon and browse for Administrative Tools

Once accessed:

1. Double click **Services**, locate **Sentinel RMS Development Kit License Manager** and double click it.
2. Click **Stop**
3. Enter **-PORT <your port number>** in the start parameters text box.
4. Click **Start**

Temporary Files

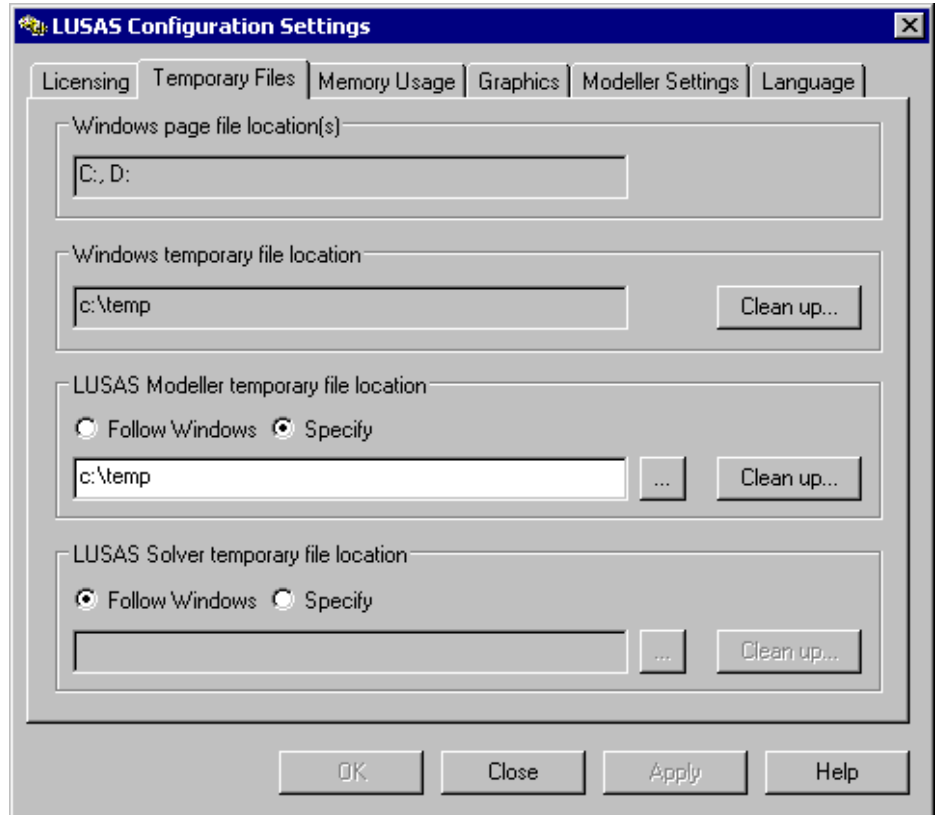


This page of the **LUSAS Configuration Utility** shows the Windows virtual memory (page) file location(s), the Windows temporary files location, and the LUSAS Modeller and LUSAS Solver temporary file locations.

- By default, LUSAS Modeller and LUSAS Solver store temporary files in the same folder as Windows, but it is suggested you specify an alternative folder, e.g. C:\Temp
- Enter the folder names which LUSAS Modeller and LUSAS Solver should use to store temporary files, e.g. C:\Temp
- Use the browse buttons (...) to see a list of available drives, and to easily locate your chosen folder(s).
- Press the **Clean up** buttons to remove old temporary files from your hard disk. This will make more disk space available to LUSAS. Each button acts only on the folder to which it is adjacent.


Disk Clean Up

Pressing the **Clean up** button on the Temporary File Information page of the **LUSAS Configuration Utility** allows you to remove old temporary files from your hard disk.

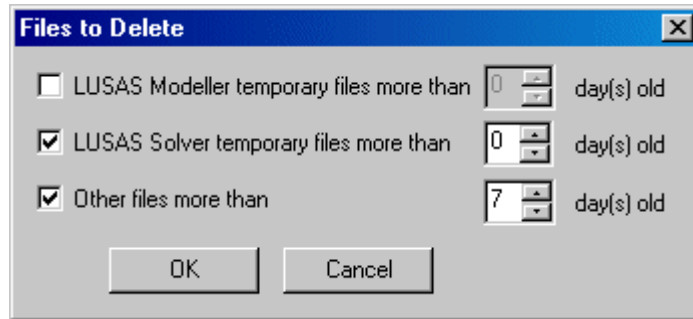

You may delete temporary files that were created by LUSAS Modeller, LUSAS Solver, and/or all other programs. In each case, you may choose the age in days of files to be deleted. 0 days will delete all files; 1 day will delete files created yesterday or earlier; and so on.

Memory Usage Information

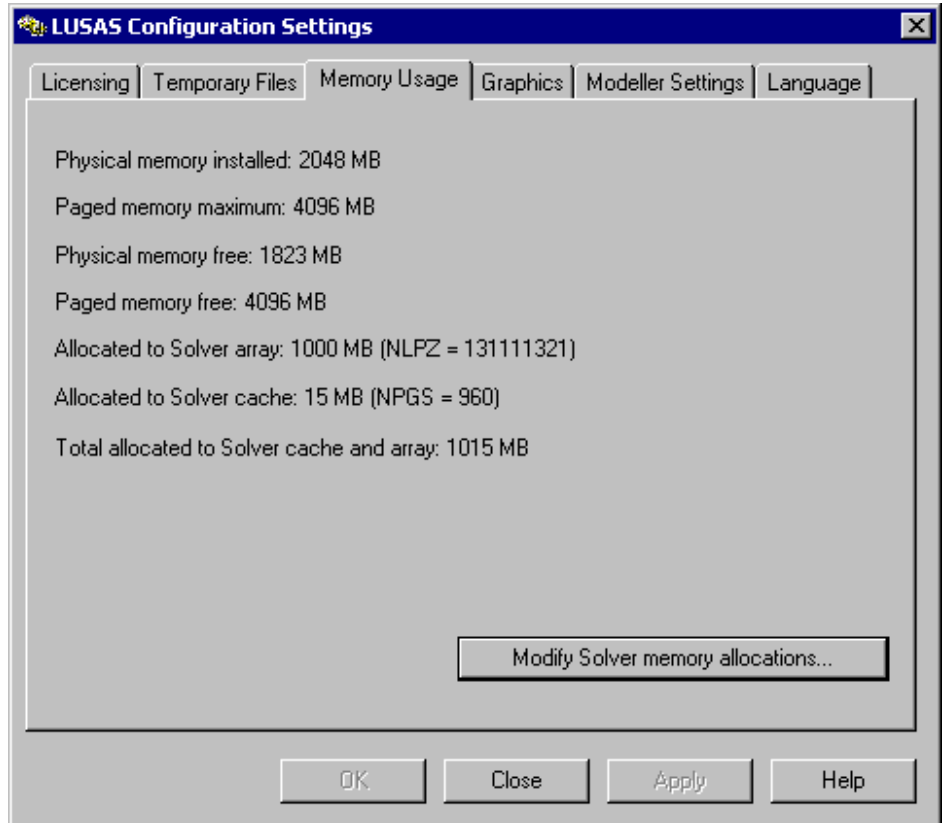

This page of the **LUSAS configuration utility** shows the physical memory (RAM) installed in your computer, and also how much of it is in use.

It also shows the paged (disk) memory which is available for use as virtual memory and how much of it is in use.

Additionally, the amount of memory allocated by the currently selected version of LUSAS Solver is shown. You may change this latter amount by using the **Modify Solver memory allocations** button.

Modify Memory Usage

Pressing the **Modify Solver memory allocations** button on the Memory Usage of the **LUSAS Configuration Utility** page presents this page which lets you specify the amount of memory which LUSAS Solver should use and values of related system parameters.

Modify Memory Usage

Memory allocated to Solver array

☒ Specify in MB 492.77

☐ Specify number of real locations (NLPZ) 64588349

Memory allocated to Solver cache

☒ Specify in MB 15.0

☐ Specify number of pages in cache (NPGS) 960

Elements in group

☒ Automatically calculate


☐ Specify maximum number of elements (MXELGP) 32

OK Cancel Set Defaults

- ☐ **NLPZ** determines the size of the LUSAS memory in which all the LUSAS calculations are performed
- ☐ **NPGS** specifies the maximum number of data records allowed in the LUSAS data cache
- ☐ **MXELGP** specifies the maximum number of elements in a group.

Owing to the wide range of hardware configurations available and the difference in magnitude between different LUSAS analyses, it is impossible to identify a single set of optimum values for all users. Advice should be sought from LUSAS technical support (support@lusas.com) if you intend to make changes to your PC's memory usage settings.

Graphics

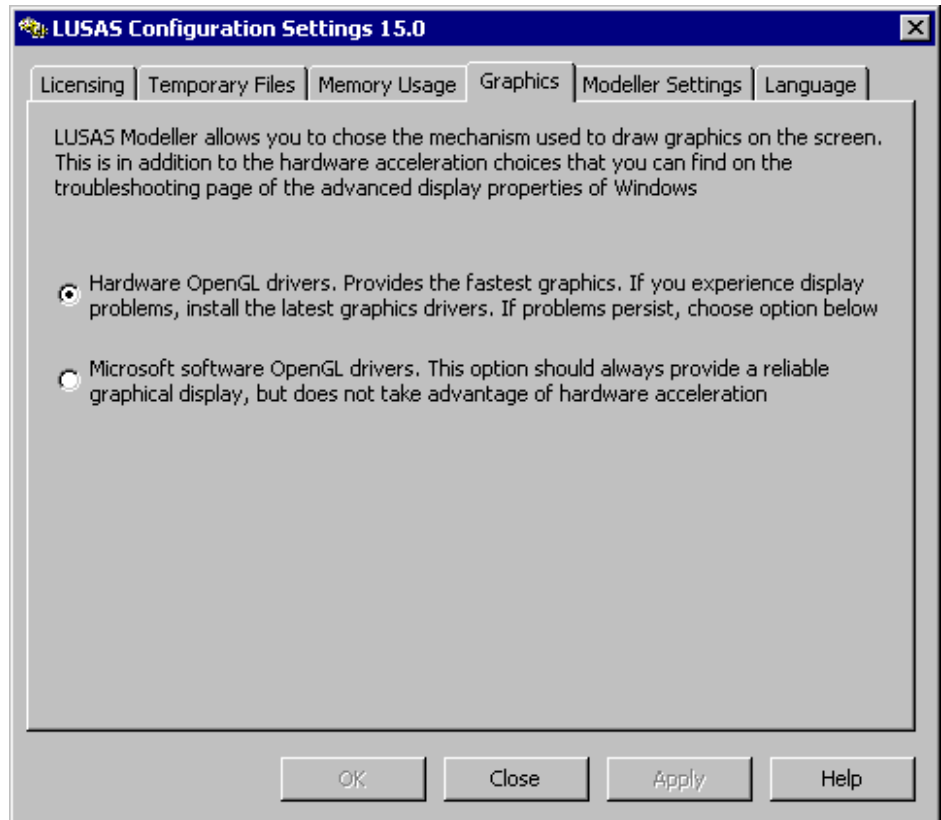

This page of the **LUSAS Configuration Utility** allows you to choose the way that your graphics are drawn to the screen. This is in addition to the hardware acceleration choices that are available from the troubleshooting pages of the advanced display properties in some Windows operating systems that allow you to manually control the level of hardware acceleration and performance of your graphics hardware.

The choices on the LUSAS Graphics page are:

- **Hardware OpenGL drivers** Provides fast graphics if you have a graphics card and driver that supports OpenGL. Choosing this option will use the installed graphics card if it supports OpenGL 1.5. If there is a graphics card supporting an earlier version of OpenGL (such as 1.2), LUSAS will internally revert to using the Microsoft software OpenGL drivers. If you experience display problems with using this option ensure that the latest drivers for your graphics card are installed. If necessary check with the manufacturers website. If


problems still exist contact LUSAS technical support and use the Microsoft software OpenGL drivers option until it can be resolved.

- **Microsoft software OpenGL drivers** This option should always provide a reliable display but does not take advantage of hardware acceleration.

Notes:

- Graphics acceleration settings in LUSAS work within the limits of the Windows hardware settings. For maximum graphics acceleration set the Windows hardware settings to Full and set the LUSAS configuration graphics settings to use the Hardware OpenGL driver.
- Problems can occasionally be encountered due to the Hardware OpenGL drivers being used to control the graphics display. If this happens, you should ensure that your graphic card drivers are the latest stable version as provided by the graphic card's manufacturer. Visit the manufacturer's web site to download any updated drivers and restart Modeller to test. If updating your graphics drivers does not solve the problem, software graphics acceleration will have to be used. Run the LUSAS Configuration Utility and select the Microsoft software OpenGL drivers option on the Graphics tab to do this.
- If you are installing LUSAS (or changing the graphics settings in the Configuration Utility) via Remote Desktop you will need to set the "Microsoft software OpenGL drivers" option. Even if the graphics card on the PC supports OpenGL 1.5, you will not be able to use this via remote desktop.

Modeller Settings

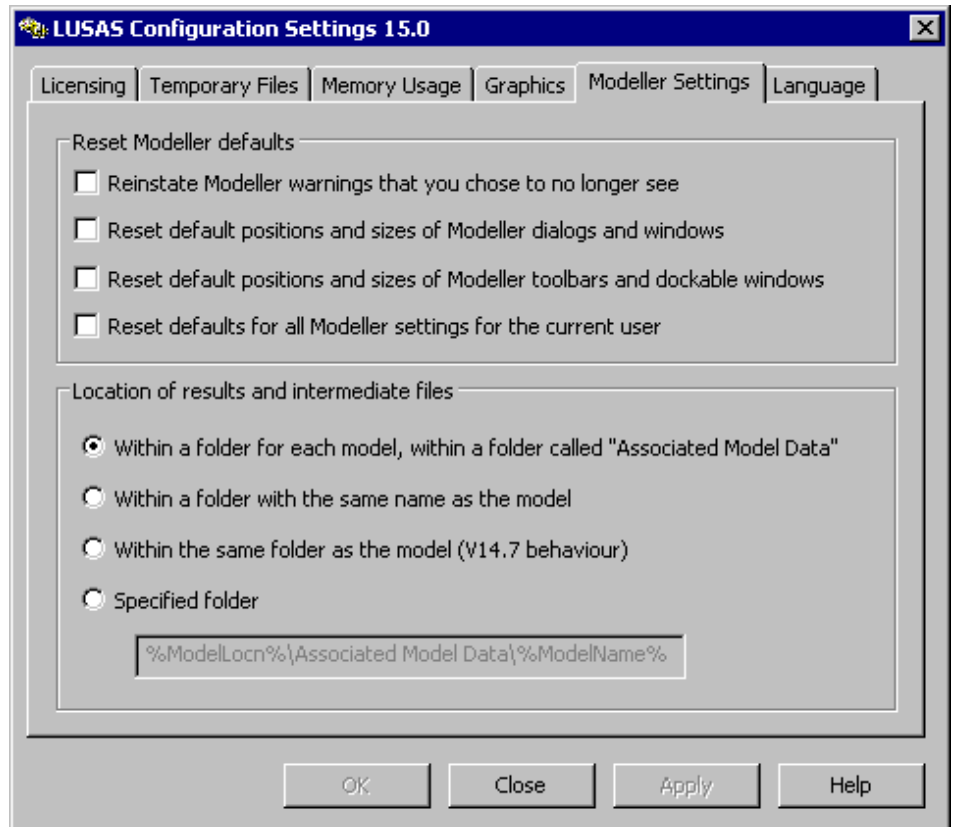

This page of the **LUSAS Configuration Utility** allows you to reinstate any Modeller warnings that you previously chose to stop the display of, reset the stated default Modeller settings for the current user, and control where LUSAS results and intermediate files are written to.

Reset Modeller defaults

Various Modeller defaults can be reset on this page:


- Reinstate Modeller warnings that you chose to no longer see
- Reset default positions and sizes of Modeller dialogs and windows
- Reset default positions and sizes of Modeller toolbars and dockable windows
- Reset defaults for all Modeller settings for the current user

Location of results and intermediate files

For each model the location of files that are created in the course of a building it and running the various analyses associated with it can be specified as being:

- **Within a folder for each model, within a folder called "Associated Model Data"** This is the default setting. Note that the model file itself does not reside within the folder created.
- **Within a folder with the same name as the model** Note that the model file itself does not reside within the folder created.
- **Within the same folder as the model** (This is Version 14.7 behaviour)
- **To a specified folder** where the location can be defined by internal LUSAS tokens and ordinary text. For example, the token **%ModelLocn%** is substituted with the working current folder for the model; and **%ModelName%** is substituted with the model's file name. Relative links (e.g. **..** to use the parent folder) can alternatively be specified.

Language

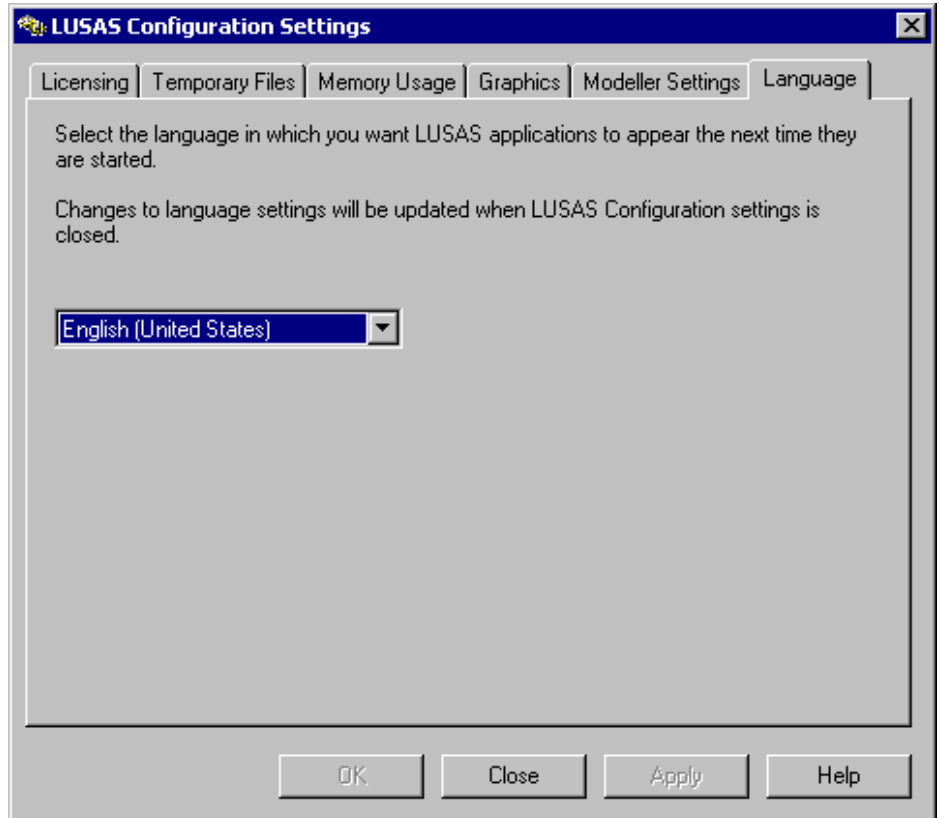

This page of the **LUSAS Configuration Utility** allows you to select the language you want the user interface of the LUSAS application to use next time it is started.

Current language options are:

- ☐ **English (United States)**
- ☐ **Chinese (People's Republic of China)**

In addition to changing your language settings for LUSAS use you will also have to ensure the correct regional language settings are specified and the appropriate character sets are installed on your PC.

Potential Installation and Running Errors

If you experience problems after installing a valid LUSAS license when trying to run the software, check the error file `LusasM_*.err` (which is located in your startup folder) and any LUSAS Solver text output files (`<jobname>.out`) (which are located in your working folder.) An Explanation of the common errors that may be encountered can be found at http://www.lusas.com/support/licence_key.html

If you encounter continued problems, please contact LUSAS Technical Support, support@lusas.com attaching the most recent `LusasM_*.err` file and a description of the licensing option which you are using, along with any other error messages you are obtaining. It is also requested that you run the LUSAS configuration utility and press **Create report...** and attach the report created to your email.

Information on problems with a particular license can be retrieved selecting a greyed-out license on the licensing page of the LUSAS Configuration Utility, or on the Modeller licence selection dialog, and pressing the Details button. The errors displayed can be copied and pasted for sending to LUSAS Technical Support,

Network (Floating) license installation error messages

If you are experiencing problems with installing or using the network license, full explanations of messages and fixes are given on the LUSAS website http://www.lusas.com/support/error/sentinellm_errors.html

See *Contacting LUSAS Technical Support* for details of how to create reports for sending to LUSAS Technical Support.

If you do not have a local DNS running on your network

If you do not have a local DNS (domain name service) running on your network you may have problems accessing machines in your network by name.

One example of this would be if you are using your Internet Service Provider's (ISP's) DNS servers to resolve machines outside your office but they also try to resolve your internal machine name and fail.

The situation will become more common as more ISP's use an advertising technique called DNS hijacking - this is where a user types a name in a browser and is either unsure of the exact site or spells it wrong. The ISP will then takes them to a different page often offering some sort of advertising or connection information (if on a hotspot). An unfortunate side effect is that, if a local machine does not have a cached reference to another local machine it will ask the DNS for the address. If no local DNS is found/setup it will request the information from the ISP's DNS and this will return its own address instead of the real local machine. The solution is to either install a DNS program or apply a workaround.

Installing a DNS program

If you do not have a Windows Server operating system running (which would have DNS) you would need to obtain and install a DNS program to run on one of your Windows machines. BIND is probably the most frequently used (<http://www.isc.org/software/bind/>). After installing the DNS server give that machine a static IP address, then specify that DNS server first in your router settings.

To create a static IP address you only need to create a reservation in your router. You can then enter that IP address in the LUSAS Configuration Utility program when you select "Add a new license"

Workaround without installing a DNS program

A workaround, without having to install a DNS program, is to use the IP Address and not the machine name in the LUSAS Configuration Utility program. If the Sentinel license server is on a machine which obtains its IP from DHCP then the server's IP address should be set and reserved in DHCP. This will ensure the server always has the same IP address. Use this IP address in the LUSAS Configuration Utility program.

Problems with Hardware Graphics Drivers

Problems can occasionally be encountered due to the Hardware OpenGL drivers being used to control the graphics display. This will only occur when the LUSAS Hardware OpenGL driver option is also selected on the LUSAS Configuration Utility. If this happens, you should ensure that your graphic card drivers are the latest stable version

as provided by the graphic card's manufacturer. Visit the manufacturer's web site to download any updated drivers and restart Modeller to test.

If updating your graphics drivers does not solve the problem, software graphics acceleration will have to be used. Run the LUSAS Configuration Utility and select the Microsoft software OpenGL drivers option on the Graphics tab to do this.

Computer hangs on reboot when USB Key inserted into USB Hub

When using a USB Key inserted into a USB Hub if the computer fails to reboot remove the USB Key from the USB Hub and insert directly into a USB port on the computer.

